

LIFT ASSIST KIT OPERATORS MANUAL


SECTION 1

Installation

- 1.1 Install the latch pin on each side of the front of the tractor frame. Use the rear hole on the long frame tractor.
- 1.2 Install the mower on the tractor.
- 1.3 Slide a strap on each side of the mower pivot arm weldment. Secure with a cotter pin on each side of the strap.
- 1.4 Using the attachment lift, raise the mower to the full "UP" position.
- 1.5 Hook one end of a spring to the strap and hook the other end to a spring latch. Note the assembly of the spring latch as they are left hand and right hand so that the arm is bent away from the tractor frame. Repeat the spring assembly for the other side.
- 1.6 Hook the spring latch on the latch pin and swing the handle to the locked position. Similarly latch the other side.

SECTION 2

Illustrated Parts and Parts List

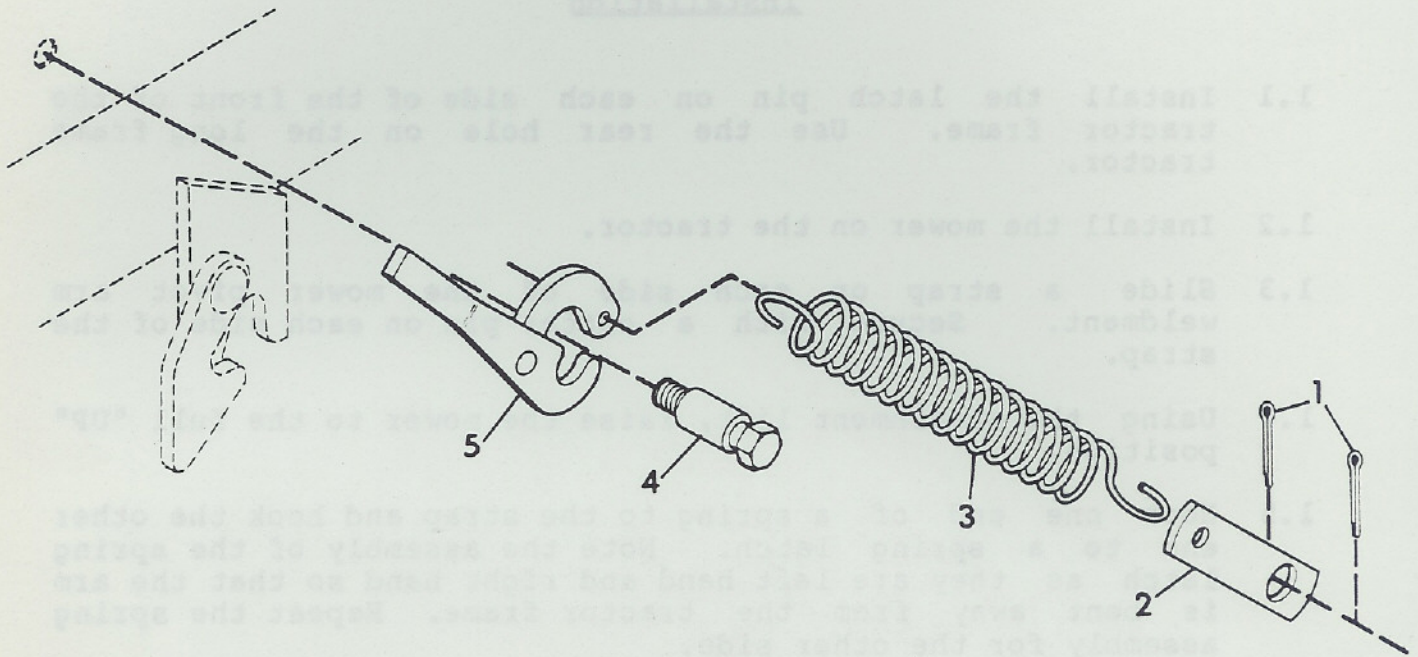

ITEM NO.	PART NO.	QTY.	DESCRIPTION
1	120123	4	Pin, Cotter .125x1.25
2	11273	2	Strap
3	11272	2	Spring, Extension 7.625x1.5x70R
4	31688	2	Pin, Latch
5	40311	1	Assembly, Spring Latch L.H.
	40309	1	Assembly, Spring Latch R.H.