



REAR WHEEL WEIGHT MANUAL


SECTION 1

Installation

1. Guide the weight (smooth side turned outward) into the wheel rotated to align the mounting holes.
2. Install the 1/2-13x7" bolts from the inside. Use the 8" bolts when the wheels are turned outward.
3. Put washers followed by 1/2-13 washer insert nuts on the bolts.
4. Tighten the bolts just enough to keep the weight from moving in the wheel.

SECTION 2

Illustrated Parts and Parts List

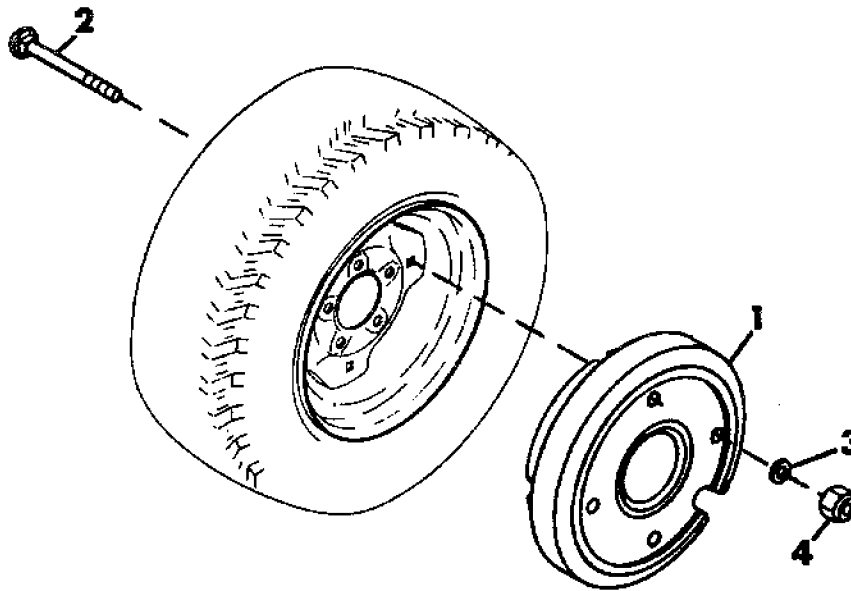

ITEM NO.	PART NO.	QTY.	DESCRIPTION
1	38251	1	Weight, Rear Wheel
2	127102	4	Bolt, 1/2-13x7.00 Rd Hd Sq Nk
	127112	4	Bolt, 1/2-13x8.00 Rd Hd Sq Nk
3	417098	4	Washer, Flat .531x1.000x.063
4	435507	4	Nut, Lock 1/2-13